

Plumber and Electricians Notice

PLUMBERS & ELECTRICIANS


Please Be Aware!

JJI-Joists are being used on this site

Please observe the information below.

- **DO NOT CUT OR NOTCH THE SOLID TIMBER UNDER ANY CIRCUMSTANCE.**
- Holes up to 35mm may be drilled anywhere along the centre of the OSB web.
- Where two or more holes are together, a distance of 2 x the larger hole **MUST** be left between them. E.g. 30mm hole next to 35mm hole, 2 x 35mm = 70mm, therefore 70mm must separate the holes.
- For information regarding holes in JJ-Glulam, please contact your JJI-Joist Distributor.

A 35mm hole may be drilled anywhere on the centre line of the web material

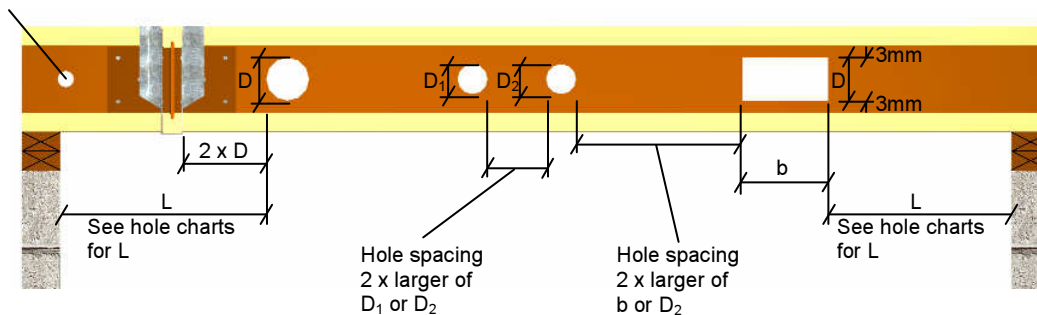

- Minimum Distance (L) from inside face of a support to the nearest edge of circular hole

Hole Size (mm)	Distance (m)
50	0.77
100	1.38
125	1.51

See Hole Location Guide in JJI-Joist Technical Manual for full hole details.

The above information relates to JJI-Joists between the depths of 195mm and 300mm inclusive. For depths outside of that range, please contact your JJI-Joist Supplier.

REMEMBER – IF IN DOUBT, ASK!

Contact:

JJI-Joist Distributor Details

20/04/07

Page 1 of 1